

FLATMASTER-NC

Home Improvement Unit for Flats
(models fitted with additional heater)

Installation Guide

FLATMASTER-NC

The FLATMASTER-NC is a 'handed' product.

The L/R signifies the discharge direction viewed from the front.

The FLATMASTER-NC-L unit is supplied arranged for LEFT HAND discharge of air.

The FLATMASTER-NC-R unit is supplied arranged for RIGHT HAND discharge of air.

Units are supplied assembled and include a thermostatically controlled heater. A unit mounted override switch is provided.

Electrical details

Supply: 230V 1 phase 50Hz

Power consumption (watts): Low speed = 5.

Med = 8. High = 13.

Figure 1. Customer installation wiring.

